

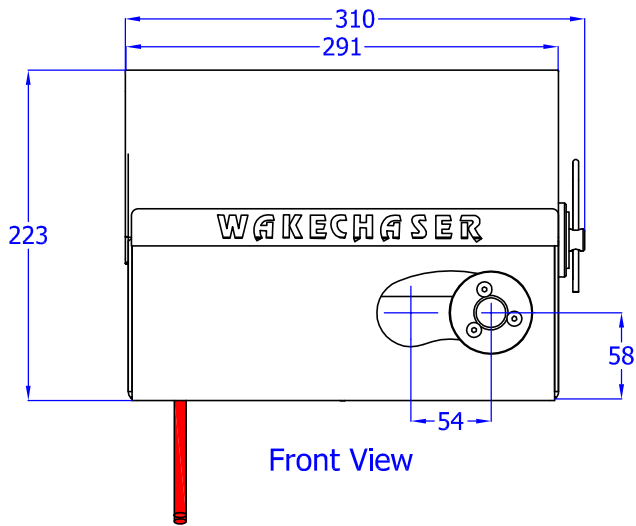


Top View

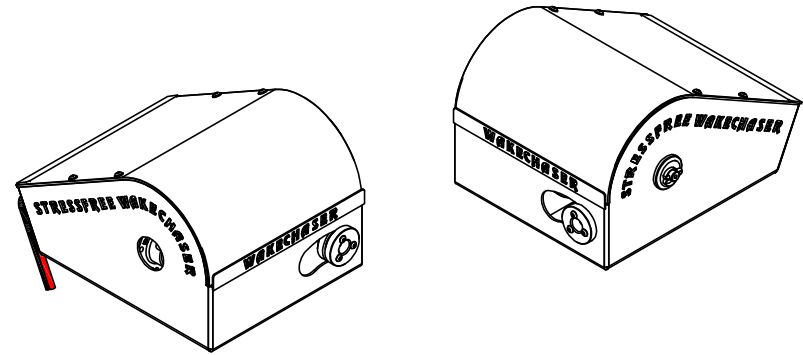


Front View

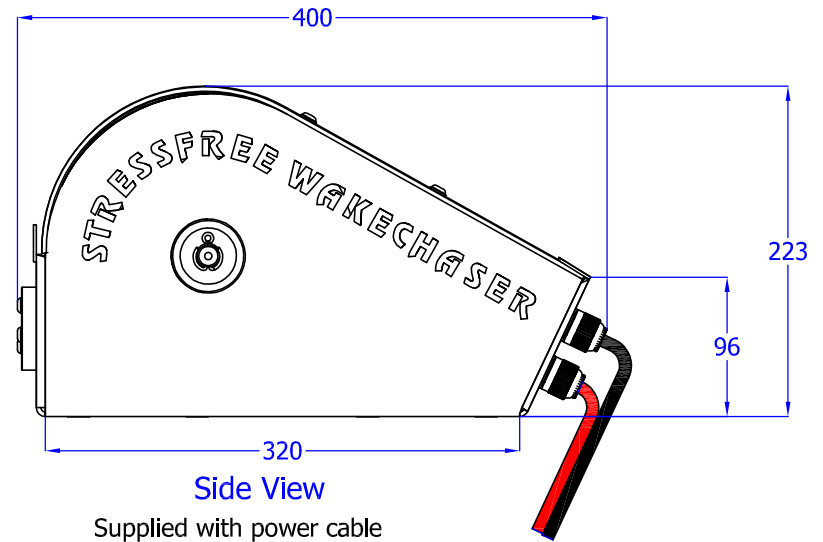


Side View



Supplied with power cable pre-fitted

© COPYRIGHT 2018
Stress Free Marine. Pty. Ltd.

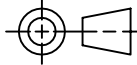
			TOLERANCES Unless otherwise stated			SCALE Drawn		MATERIAL 316 Stainless Steel		FINISH Polished		DO NOT SCALE DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE STATED			
			NO DEC. ±			Checked		stressfree marine Pty Ltd®		NAME WAKECHASER Winch LH		DRAWING No. TBA			
			1 DEC. PL. ±			Design OK									
			2 DEC. PL. ±			Approved									
			HOLE DIAM. ±			DATE 3/05/18									
			ANGLES ±												
Issue	Ref.	REVISION	Drawn	Apprv.	Date										

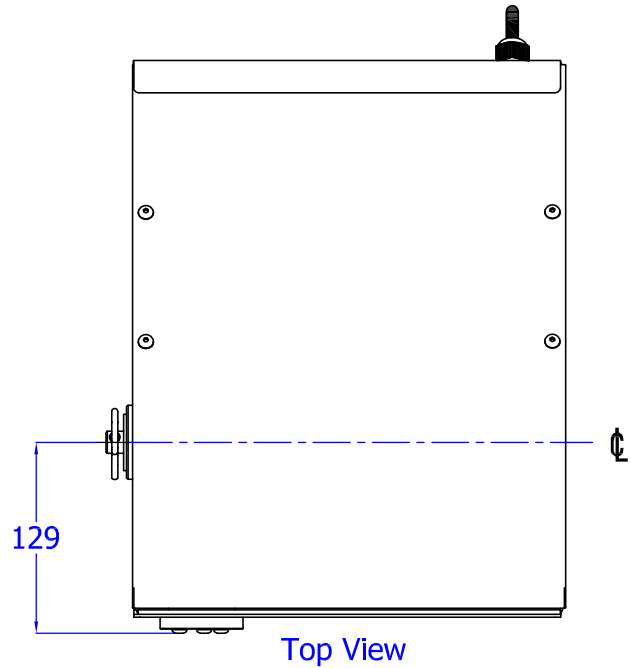

Top View

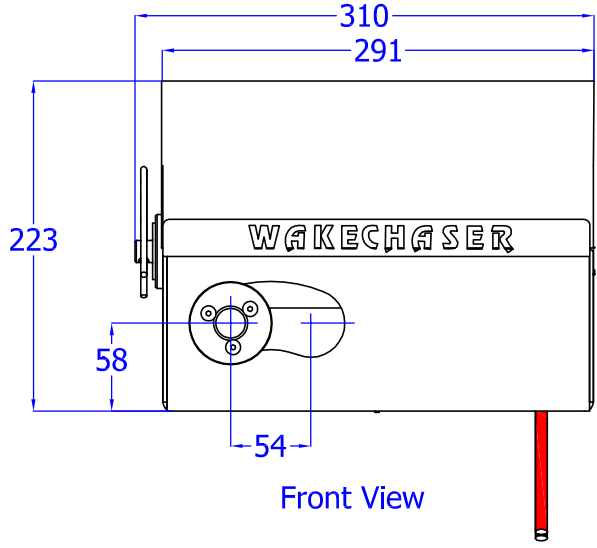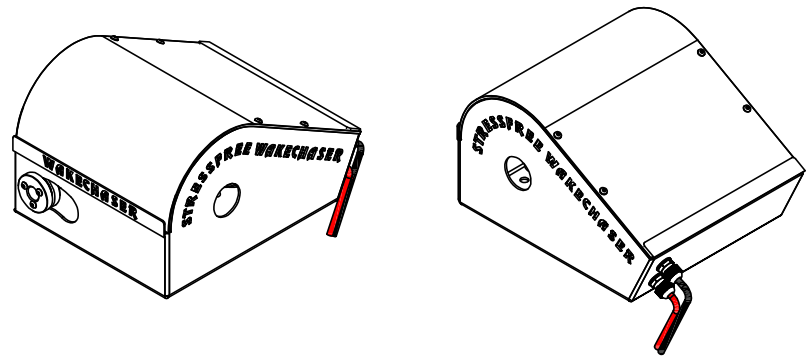


Front View

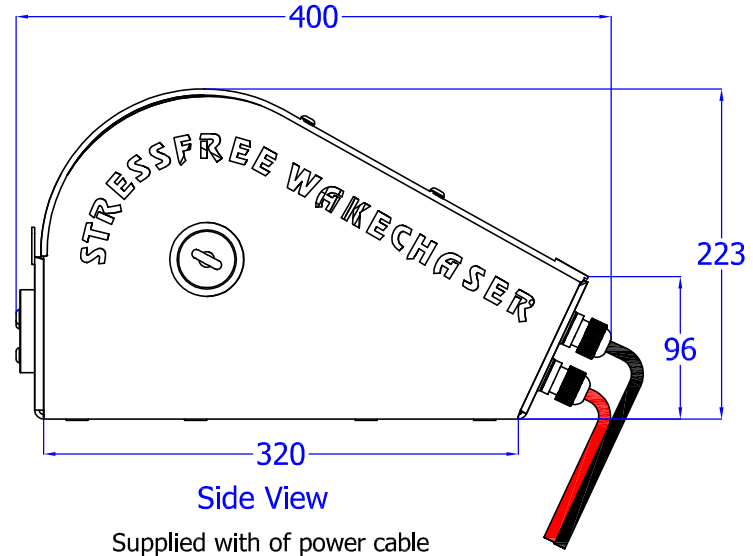

Side View

Supplied with of power cable pre-fitted

 © COPYRIGHT 2018
Stress Free Marine. Pty. Ltd.



			TOLERANCES Unless otherwise stated			SCALE Drawn		MATERIAL 316 Stainless Steel		FINISH Polished		DO NOT SCALE DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE STATED			
			NO DEC. ±			Checked		stressfree marine Pty Ltd ®		NAME WAKECHASER Winch RH		DRAWING No. TBA			
			1 DEC. PL. ±			Design OK									
			2 DEC. PL. ±			Approved									
			HOLE DIAM. ±			DATE 3/05/18									
			ANGLES ±												
Issue	Ref.	REVISION	Drawn	Apprv.	Date										

Wakechaser Wiring Layout

Fig. 1

Wakechaser
Control box


There are no user servicable parts in the control box. It has been sealed to protect the wiring connections and components.

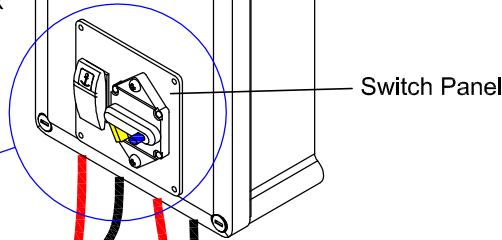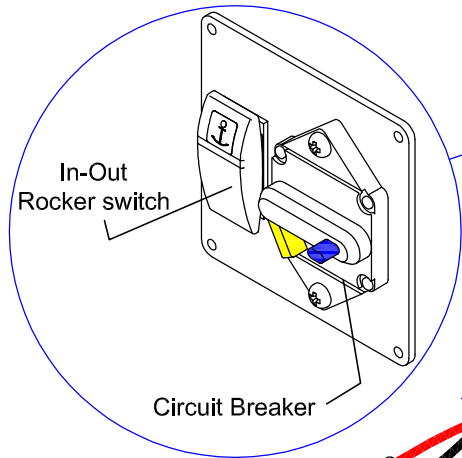

Important Notes:

The control box should be mounted in an accessible location that is not exposed to undue amounts of water spray.

The switch panel consists of a circuit breaker and an "in-out" switch. The circuit breaker can be turned on to provide power to the switch by activating the yellow arming lever. Pressing the blue button will deactivate it.

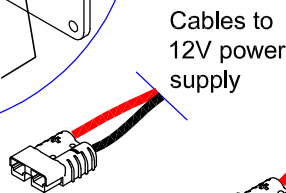



Cables from the control box to Wakechaser or dashboard switch if fitted.

End of cable prepared for Plug terminals.



Ensure when joining Anderson plugs that they join "positive to positive" (+) and "negative to negative" (-).

The Wakechaser is prewired in the factory. It is supplied with 4 Metres of cable terminated to suit the Anderson plug supplied. The Anderson plug can be fitted by the installer after the cable has been run from the unit through the tower etc. to the control box connection.

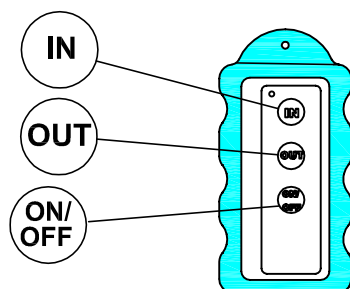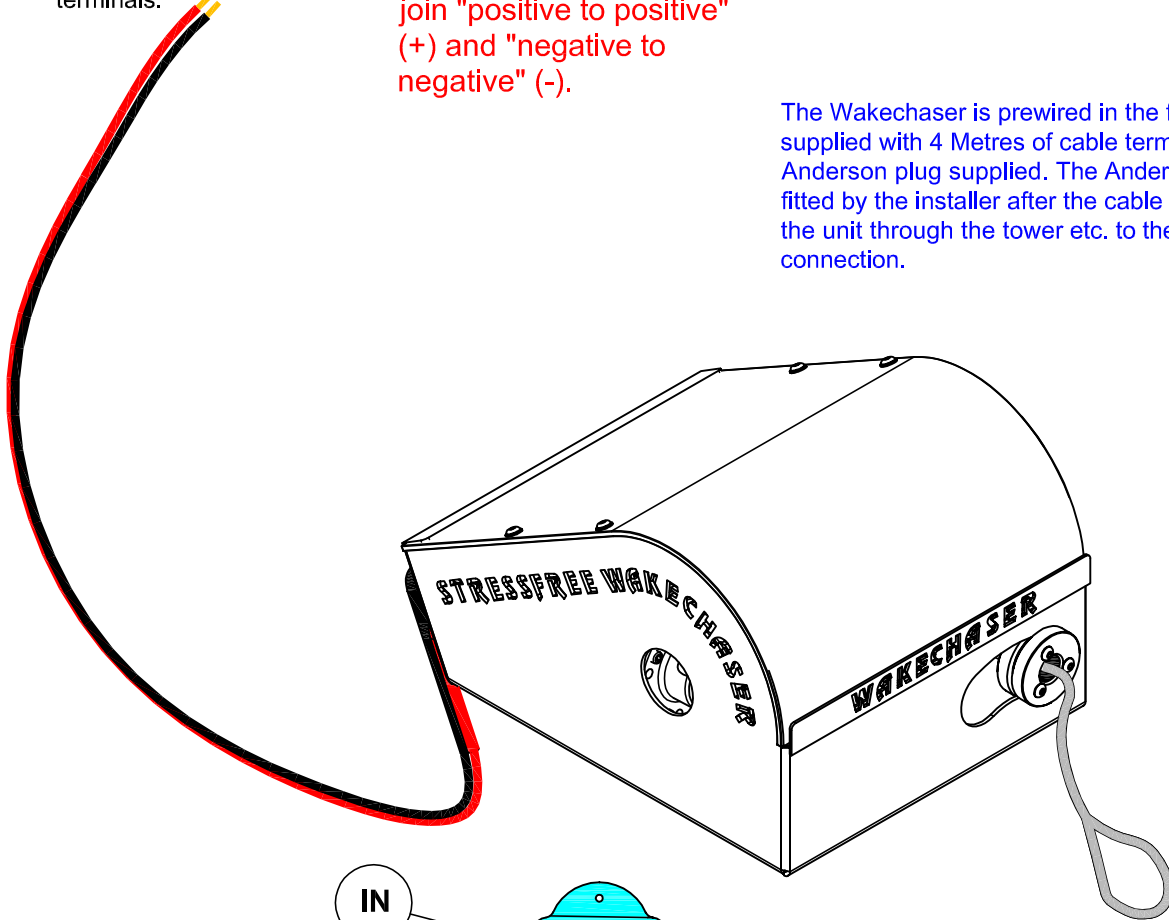

Remote Control

The Wakechaser is factory fitted with 3 metres of Dyneema rope.